

tineco

MODA ONE SERIES

Smart Hair Dryer

Instruction Manual

Manual De Uso

Mode D'emploi



*Actual product may differ from illustration.

CONTENTS

Important Safety Instructions.....	2
Overview.....	6
Accessories.....	7
Operation.....	8
Maintenance.....	12
Specifications.....	13
Troubleshooting.....	13
Warranty.....	14

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING (THIS MACHINE)

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

KEEP AWAY FROM WATER HOUSEHOLD USE ONLY

When using an electrical machine, especially when children are present, basic safety precautions should always be followed, including the following:

WARNING – To reduce the risk of fire, electric shock, or injury:

1. The machine is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
3. DANGER – As with most electrical appliances, electrical parts are electrically live even the switch is off. To reduce the risk of death by electric shock: always “unplug it” immediately after using.
4. Don't use while bathing.
5. Do not place or store the machine where it can fall or be pulled into a tub or sink.
6. Do not place in or drop into water or any other liquid.
7. If the machine falls into water, “unplug it” immediately. Do not reach into the water.
8. Use this machine only for its intended use as described in this manual. For INDOOR use ONLY. Do not use attachments not recommended by Tineco. Do not use this product for anything other than its intended use, such as drying clothes, etc.
9. Do not use with damaged cord or plug. If machine has been dropped, damaged, left outdoors, dropped into water, or is not working as it should, please contact our Customer Service.
10. The machine should never be left unattended when plugged in.
11. Check that the voltage of the main circuit corresponds with the rating of the machine before operating. Do not use a voltage converter as this may cause an electrical hazard. Do not handle any part of the plug or machine with wet hands.

12. Do not handle any part of the plug or machine with wet hands.
13. Do not operate where aerosol (spray) products are being used. Keep the machine away from flammable areas.
14. Never block the air openings of the machine or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
15. Do not direct hot air toward eyes or other heat sensitive areas.
16. Remove the plug from the socket when not in use or during a power outage. Do not pull the plug out by the cord when disconnecting from the power socket. Do not use an extension cord with this machine.
17. Do not pull the cord and place heavy items on it. Keep the cord away from heated surfaces. Do not wrap the cord around the machine. If the cord is damaged, stop using the machine immediately and seek advice from Tineco.
18. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the machine.
19. If the machine not working properly, or if it has been dropped, damaged, or dropped into water, please contact our Customer Service for support.
20. If the machine overheats, it switches off automatically. Unplug the machine and let it cool down for a few minutes. Before you switch the machine on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
21. In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this machine must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off.
22. The machine has a reset and test button built into the plug, which should be operated each time the machine is plugged in and used. To test: Press the test button. The reset button will pop out, indicating that the machine is safe to use. To reset: unplug the machine and press the reset button. Plug in again to use your machine.
23. This machine is provided with a protective device (ALCI Machine Leakage Circuit Interrupter) that may make the machine inoperable under some abnormal conditions (such as immersion of the machine). If the machine becomes inoperable, return the machine to a service center for examination and repair.
24. Note – If the ALCI trips while in use, the machine should be unplugged. Press the reset button and reinsert the plug into the

outlet. If the ALCI immediately trips for a second time, unplug the machine and contact the Tineco Customer Service.

25. Storage – important. When not in use, the machine should be unplugged, allowed to cool and stored in a safe and dry location, out of reach of children. Do not pull the cord or wrap it around the machine. The cord should hang down or lie loose and straight at the entry point into the main body of the machine.
26. Never use while sleeping.
27. Never drop or insert any object into any opening or hose.
28. The air exit, metal ring, attachments and area shaded in red may be hot during use. Allow them to cool before handling.



WARNING

THE CONCENTRATOR AND DIFFUSER ACCESSORIES CONTAIN MAGNETS.

Keep away from pacemakers, defibrillators, credit cards and electronic storage media.

FCC Statement

TINECO / MODA ONE SERIES

This appliance complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This appliance may not cause harmful interference, and (2) this appliance must accept any interference received, including interference that may cause undesired operation.

TINECO INTELLIGENT, INC.

1700 WESTLAKE AVENUE N., SUITE 200, SEATTLE, WA, 98109, USA

WWW.TINECO.COM

1-855-292-8864

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the

limits for a Class B digital appliance, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

Note

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment, such modifications could void the user's authority to operate this equipment.


IC Note

This appliance contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference.
 - (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- This Class B digital apparatus complies with Canadian ICES-003.
 - This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment.

SAVE THESE INSTRUCTIONS

Overview

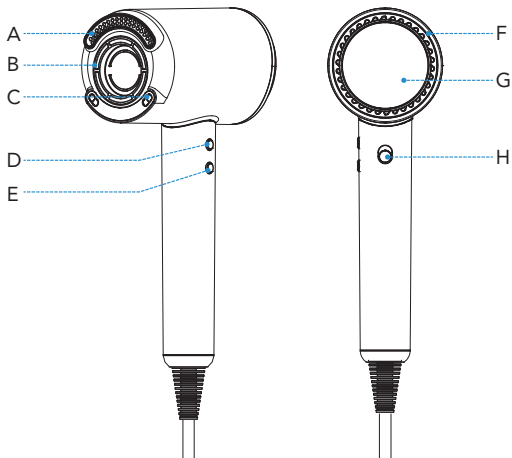

A. Humidity Sensor

B. Air Outlet

C. Proximity Sensor

D. MAX/AUTO Button


E. COOL Button

F. LED Loop

G. Airflow Inlet Cover

H. Power Switch

Accessories

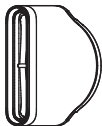


Styling Concentrator

Precise airflow directed at specific areas to style and quickly dry the hair.



Smoothing Nozzle

Softer, gentler airflow to dry and smooth the hair.

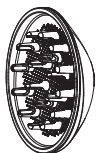

Diffuser

Disperse airflow and dry your curls more evenly and gently while preventing frizz.


Note:







- The removable magnetic nozzles can be quickly and easily attached to the front of the product. The nozzle can be rotated 360° to obtain a more precise position for better styling your hair.
- Please only attach and remove nozzles when the hair dryer is switched off. Do not touch the air outlet and nozzles during use to avoid burns. After use, place the hair dryer on a heat-resistant surface until it cools down. Only then remove the nozzles.

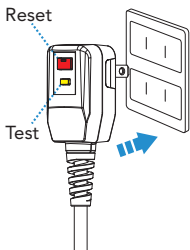Operation


ALCI Plug

To make sure the safety device is working, test the ALCI safety feature every time before using the machine.



-   Plug in the machine and press the "Test" button.
-   The reset button will "click" and pop out. If running, the machine will stop working.
-   To reset the ALCI, unplug, press the "Reset" button and plug back in.

Mode Selection

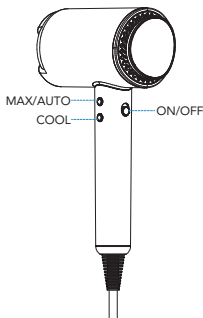




The hair dryer will start in AUTO Mode by default.

In AUTO mode, the color of LED Loop will change color according to the moisture detected and the distance between the machine and your hair.


- Within the detecting distance, the sensor can continuously detect the hair moisture and adjust the air flow and temperature accordingly.
- The machine will automatically generate anions to keep your hair static free, shiny, and healthy.

You can also select MAX or COOL Mode to best fulfill your needs.

Press  to enter MAX mode, press it again to enter AUTO mode.

Press  to enter COOL mode, and press  to switch back to MAX mode.

Indicator

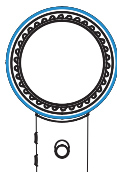

LED loop

AUTO Mode



Hair Drying: airflow & heat change with moisture in real time (moisture detected)



Hair Care: gentle airflow & temperature with anions generating (no moisture detected)



Out of detecting distance
Note: enter into energy-saving state.

Max Mode Max airflow & temperature

COOL Mode



Cool & max airflow

Switching Mode



If you switch modes, the LED loop blinks 3 times

App


- More functions can be performed using the Tineco app.
- Download Tineco app from the App Store, Google Play or Tineco Official Site, it's easier than ever before to control your hair condition.







✓ iOS 9.0 or later

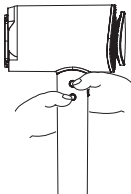✓ Android 5.0 or later

How to connect?



1. When connect the hair dryer to App, long press  &  at the same time until the LED loop blinks blue.
2. After connection, press either the  or  will enter AUTO mode.

Note:

- Please do not press any button while connecting.

App Function Introduction



AUTO Mode

Intelligently adjusts airflow, heat and anions to provide you a wonderful hair care experience.



Manual Mode

Customize your MODA ONE. Easy to control the temperature and airflow.



COOL Mode

Select cool airflow to best fit your demand.



Styling Mode

Dry curls gently and help reduce frizz.



Pet Mode

Set your dryer to medium heat and airflow to dry your pets.



Kids Mode

Dry the hair of your baby with moderate heat and airflow.



Hair Care Log

Check the log to monitor details of your hair care on daily basis.



Contact Us

You can contact the Customer Service about any problems during the working hours.




Feedback


If you have any comments, please send us your feedback.

Maintenance


- In order to maintain high performance, please clean the air inlet filter regularly.
- Before cleaning, switch the hair dryer off and unplug from the socket. To avoid malfunction, do not wash the filter.

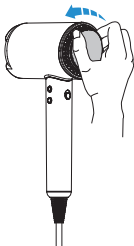

Remove the air inlet cover by rotating it in an counter-clockwise direction.

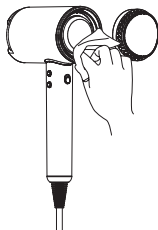

Gently wipe the dust from the filter and air inlet cover with a soft brush or dry cloth.

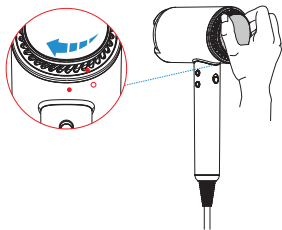


Insert with correct alignment, rotate clockwise to attach the cover.

Specifications

Product	MODA ONE SERIES
Voltage	120V, 60Hz
Rated Power	1400W

Troubleshooting

Problem	Possible cause	Solution
The machine does not turn on	1. No power 2. Reset button is not pressed	1. Check and insert the power plug firmly into the socket 2. Press the Reset button
During use the LED Loop blinks red 	Machine overheating, under overvoltage protection, etc.	After cooling down, check and remove the blockages from air inlet/outlet and then restart
The power cord/plug gets very hot	Power cord/plug maybe damaged	Please stop using the machine and contact Customer Service
Smell of burning from the dryer	Internal components are damaged	
Buttons unresponsive	Button is damaged	

Note:

If the above troubleshooting guide fails to provide a solution, please visit our website www.tineco.com for further support.

Warranty

2-YEAR LIMITED WARRANTY

- Only applies to purchases made from authorized retailers of Tineco.
- Is subject to the adherence of the requirements outlined in this instruction manual, and is subject to further conditions outlined below.

WHAT IS COVERED?

- Your Tineco product has a 2-year warranty against original defects in materials and workmanship, when used for personal care purposes in accordance with the Tineco Instruction Manual.
- This warranty provides, at no extra cost to you, all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.
- This warranty will only be valid if the machine is used in the country in which it was sold.

WHAT IS NOT COVERED?

Tineco shall not be liable for costs, damages or repairs incurred as a result of:

- Machines purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Tineco Instruction Manual.
- Use of the machine for anything other than as a hair dryer.
- Use of parts not in accordance with the Tineco Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Tineco.
- External factors unrelated to product quality and use, like accidental water damage.
- Repairs or alterations carried out by unauthorized parties or agents.
- Normal wear and tear. (e.g. fuse etc.).

WARRANTY LIMITATIONS

- Any implied warranties relating to your machine (including but not limited to warranty of merchantability or warranty of fitness for a particular purpose) is limited to the duration of this warranty.
- Warranty coverage applies to the original owner and to the original battery only and is not transferable.
- This limited warranty gives you specific legal rights. You may also have other rights which vary by region.
- Manufacturer's warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.

WARRANTY SERVICE

Register: We highly recommend that upon purchase, you register your machine on the Tineco official website (www.tineco.com) and enjoy exclusive benefits. To register, please enter the last 11 digits of the serial number (found on the power cord).

Failure to register your product won't diminish your warranty rights.

How to Claim: Please keep your proof of purchase. To make a claim under our Limited Warranty, you need to provide your serial number and the original purchase receipt with the purchase date and order number on it.

All work will be carried out by Tineco or an authorized agent.

Any replaced defective parts will become the property of Tineco.

Service under this warranty will not extend the period of this warranty.

Contact our Customer Service
Hotline: **1-855-292-8864**
or Visit Tineco website
www.tineco.com
for expert customer service.

tineco
Live Easy.
Enjoy Life.



tinecoglobal



Contact us - We'll get back to you within 1 business day.

Conéctese con nosotros. Nos pondremos en contacto con usted dentro de 1 día laboral.

Contactez-nous. Nous vous répondrons dans 1 jour ouvrable.

 www.tineco.com

 1-855-292-8864

 Mon. - Fri. 9am - 6pm (CST)